WaterSentinel[™]

Installation Instructions for the WSG-1

STEP 1		STEP 2	
Locate filter inside the refrigerator. First slowly turn the cartridge 1/4 turn to the left and remove.		Remove all packaging, apply date label if required as a reminder to replace the filter within 6 months and remove the protective sticker from the top.	
STEP 3		STEP 4	
			Reset Water Filter
Check o-ring is flat in top of filter, fill filter with water. Insert filter into refrigerator and turn 1/4 to 1/2 turn to the right - label in front. Do not overtighten.		Run water for 5 minutes through the dispenser to flush the filter. Reset the light if needed by holding down the reset filter button for 3 seconds.	

The filter cartridge should be replaced every 6 months or sooner if the flow of water to the dispenser or ice maker decreases.