 







WaterSentinel™

Installation Instructions for the WSM-1

<p>STEP 1</p>  <p>Locate filter inside the refrigerator. Leave refrigerator door open during change out. Slowly turn the cartridge 1/4 turn to the left and remove.</p>	<p>STEP 2</p>  <p>Remove all packaging, apply date label as a reminder to replace the filter within 6 months and remove the red protective cap from the top.</p>
<p>STEP 3</p>  <p>Insert filter into refrigerator and turn 1/4 turn to the right - label in front. Do not overtighten.</p>	<p>STEP 4</p>  <p>Run water for 3 minutes through the dispenser to flush the filter. Open refrigerator door and check for leaks.</p>

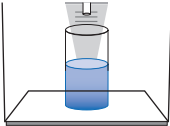The filter cartridge should be replaced every 6 months or sooner if the flow of water to the dispenser or ice maker decreases. To reset the Filter Change Indicator on the Dispenser Control Panel, simultaneously PRESS and HOLD  and  pads until the Filter Change Indicator lamp begins blinking. Release the pads and the lamp turns off.