







Installation Instructions for the WSS-1

<p>STEP 1</p>  <p>Locate filter inside the refrigerator. First slowly turn the cartridge 1/4 turn to the left and remove.</p>	<p>STEP 2</p>  <p>Remove all packaging, apply date label if required as a reminder to replace the filter within 6 months and remove the protective sticker from the top.</p>
<p>STEP 3</p>  <p>Insert filter into refrigerator and turn 1/4 to 1/2 turn to the right - label in front. Do not overtighten.</p>	<p>STEP 4</p> <p>Ice Type Child Lock</p>  <p>Run water for 5 minutes through the dispenser to flush the filter. Reset the light if needed by holding down the ice type and child lock buttons for 3 seconds.</p>

The filter cartridge should be replaced every 6 months or sooner if the flow of water to the dispenser or ice maker decreases.